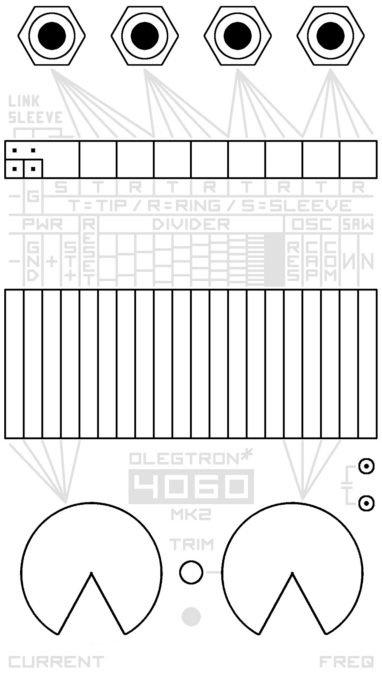
LINK
SLEEVE
GND
RESET
T=TIP / R=RING / S=SLEEVE
PWR
DIVIDER
OSC
SAW
OLEGTRON
4060
MK2
TRIM
CURRENT
FREQ

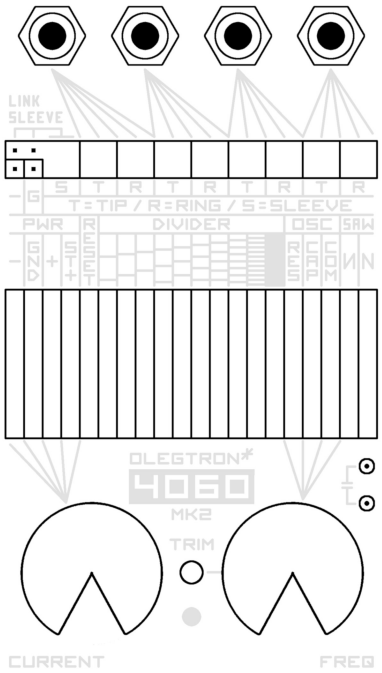
LINK
SLEEVE
GND
RESET
T=TIP / R=RING / S=SLEEVE
PWR
DIVIDER
OSC
SAW
OLEGTRON
4060
MK2
TRIM
CURRENT
FREQ

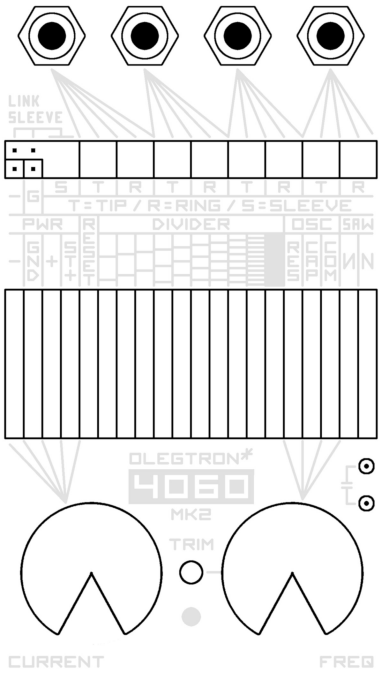
LINK
SLEEVE
GND
RESET
T=TIP / R=RING / S=SLEEVE
PWR
DIVIDER
OSC
SAW
OLEGTRON
4060
MK2
TRIM
CURRENT
FREQ

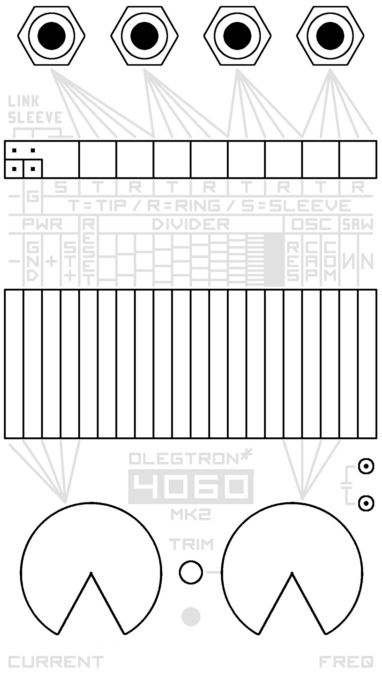
LINK
SLEEVE
GND
RESET
T=TIP / R=RING / S=SLEEVE
PWR
DIVIDER
OSC
SAW
OLEGTRON
4060
MK2
TRIM
CURRENT
FREQ

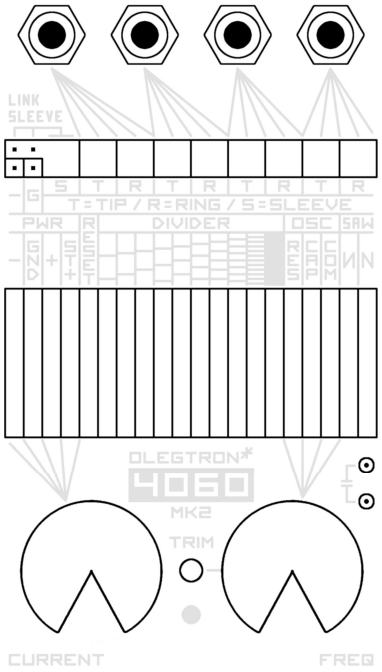
LINK
SLEEVE
GND
RESET
T=TIP / R=RING / S=SLEEVE
PWR
DIVIDER
OSC
SAW
OLEGTRON
4060
MK2
TRIM
CURRENT
FREQ

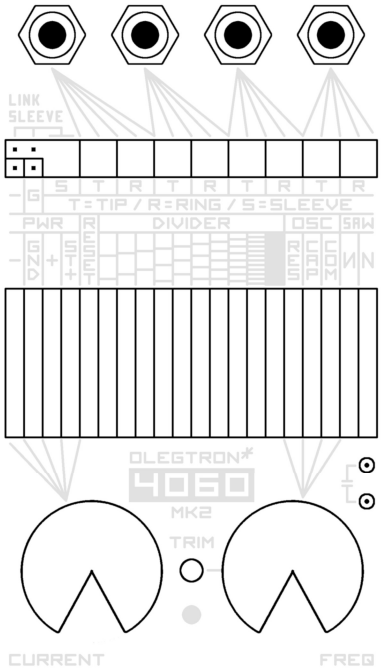
LINK
SLEEVE
GND
RESET
T=TIP / R=RING / S=SLEEVE
PWR
DIVIDER
OSC
SAW
OLEGTRON
4060
MK2
TRIM
CURRENT
FREQ

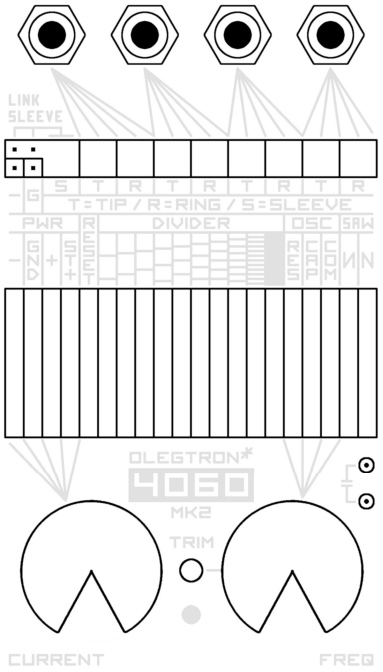
LINK
SLEEVE
GND
RESET
T=TIP / R=RING / S=SLEEVE
PWR
DIVIDER
OSC
SAW
OLEGTRON
4060
MK2
TRIM
CURRENT
FREQ

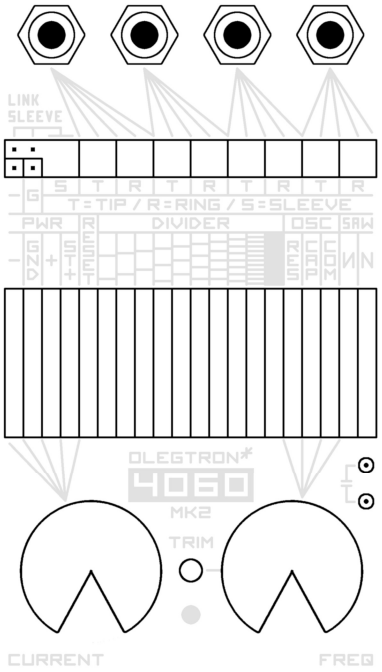
LINK
SLEEVE
GND
RESET
T=TIP / R=RING / S=SLEEVE
PWR
DIVIDER
OSC
SAW
OLEGTRON
4060
MK2
TRIM
CURRENT
FREQ